


LH25P & LH25FM

INSTALLATION AND OPERATION MANUAL

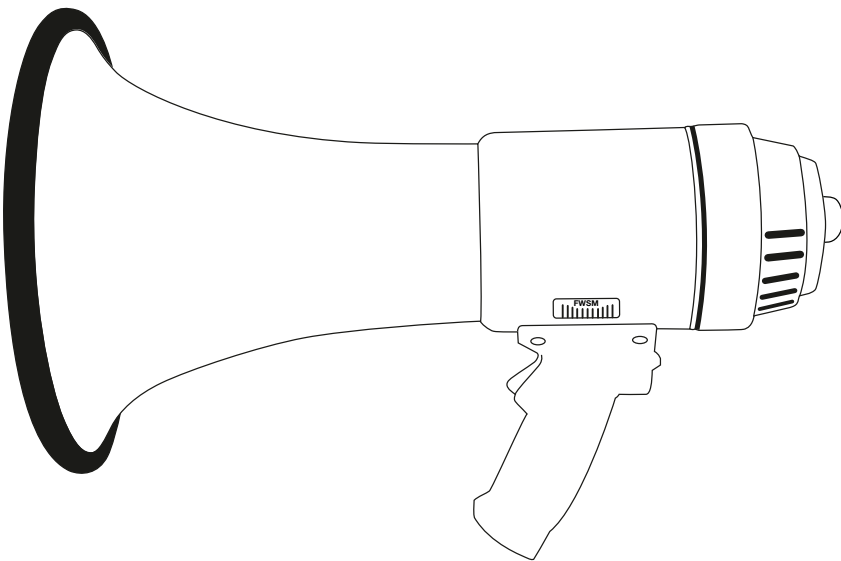

The LH25P/FM feature on board tones, the switch on the left hand side allows you to pick between:

F = Fog Horn **W** = Whistle **S** = Siren **M** = Microphone

Please note that the tones are post the volume control.

SPECIFICATIONS

Range	0.5 – 0.7 km depending on operating conditions
Power	10 x C Type batteries
Weight	1.0 kg approx, excluding batteries

Operating Instructions

- 1 If using the LH25FM push the push-to-talk button on the hand held microphone, if using the LH25P use the push-to-talk button on the handle of the loudhailer.
- 2 Position the microphone in front of your mouth and the speaker towards the area you intend to address.
- 3 Talk at a normal volume with around 5cm gap between your mouth and the microphone.
- 4 Turn the volume control on either the hand held microphone or the unit its self to reach the optimum level.

To Replace Batteries

- 1 Unscrew the cap on the rear of the loudhailer.
- 2 Remove the battery carriage.
- 3 Fill the carriage with 10 x C type batteries, ensuring that the batteries are inserted with the correct polarity.
- 4 Place the battery carriage back in the unit and screw the rear cap back on to the unit.

ENGINEERED BY AUSTRALIAN MONITOR

Address: Unit 1, 2 Daydream Street, Warriewood NSW 2102 Australia

Website: www.australianmonitor.com.au

International enquiries email: international@australianmonitor.com.au

ABN 86 003 231 187

