



PICO60P IN MEETING ROOMS WITH LOCAL INPUT

ROUTING

- Set the routing mode in the software to either Mixer or Matrix.
- Mixer Mode - Default**
Multiple inputs can be sent to each Room
- Matrix Mode**
Only one input can be routed to a Room at a time
- Routing is performed on either the Z624 front panel or the control panel in the room.
- The LEDs on both the wall panel and front of the Z624 will mirror each other
- When the Local Input option for a zone is enabled input six is used and is therefore unavailable on the Z624 rear panel

