



Z624 WITH PAGING, CONTROL AND 16 WALL PANELS

ROUTING

- Set the routing mode in the software to either Mixer or Matrix.
- MIXER MODE - DEFAULT**
Multiple inputs can be sent to each Zone
- MATRIX MODE**
Only one input can be routed to a Zone at a time
- Routing is performed on either the Z624 front panel or the control panel in the zone.
- The LEDs on both the wall panel and front of the Z624 will mirror each other.
- When the Local Input option for a zone is enabled input six is used and is therefore unavailable on the Z624 rear panel.
- A local input can be either a WPBT Bluetooth panel or a WPML mic/line input panel.

