


Australian Monitor

K SERIES

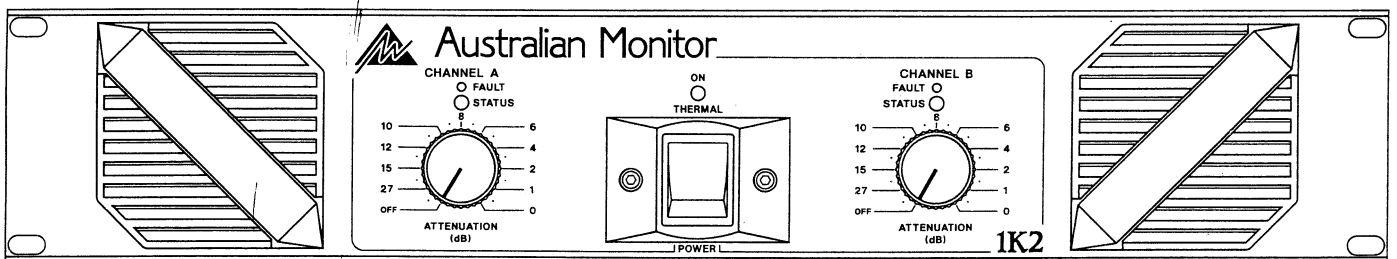


O p e r a t i o n M a n u a l

Safety Precautions and Labelling


The rear panel of the unit has a number of markings and internationally recognized symbols related to the hazards and precautions that should be taken when operating MAINS connected equipment.

The presence of a LIGHTNING FLASH with an arrowhead contained within the boundaries of an equilateral triangle is intended to alert the user that dangerous uninsulated voltages may exist within the units enclosure. These voltages may be of a sufficient magnitude as to constitute the risk of an electrical shock.

This symbol is reinforced with the text:

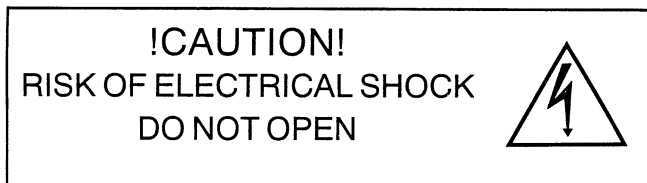

The presence of an EXCLAMATION MARK contained within the boundaries of an equilateral triangle is intended to alert the user that there is important operating and maintenance literature that accompanies the unit.

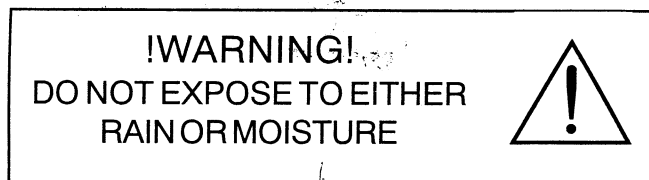

The unit should not be operated in a situation where it may encounter the entry of water, rain, or any fluids. To expose the unit to the above conditions may make the operation of the unit hazardous and increase the risk of electrical shock.

**REFER SERVICING TO
QUALIFIED PERSONNEL ONLY**

The user should not attempt to service the unit. Only qualified and knowledgeable personnel familiar with the internal workings of the unit should attempt any repair, servicing or authorized modification to the unit.

NO USER SERVICEABLE PARTS INSIDE

The unit does not contain any parts which the user can service or re-use in this or any other product.

If you are in need of special assistance and the information you require is outside the scope of this manual, please contact your nearest service agent or Australian Monitor direct:

THE TECHNICAL OFFICER
AUSTRALIAN MONITOR PTY LTD,
53 COLLEGE STREET,
GLADESVILLE. N.S.W.
AUSTRALIA. 2111

	Phone	Fax
Local	(02) 816-3544	(02) 817-4303
International	(612) 816-3544	(612) 817-4303



IMPORTANT!

Please read carefully.

This operation manual contains important information regarding safety precautions, performance, maintenance and operation of your K Series power amplifier. You should familiarize yourself with the contents of this manual **before** operating your amplifier.



The K-series Features:

- Custom designed, heavy duty alloy chassis.
- Open modular construction, for ease of servicing.
- Symmetrical weight distribution.
- Well-regulated, high current power supply.
- High VA-capable toroidal mains transformer.
- Binding post and Neutrik "Speakon" output connection (standard version).
- Stereo or bridged / mono operation.
- Input signal strapping connectors (standard version).
- 21 Position detented attenuators.
- 1 Watt output indication.
- Output clip indication at -1 dB
- Massive heat-sink and heat-exchangers.
- Efficient front to back cooling.
- Dual speed axial fans.
- Output fault indication.
- Louvred air intake grills.
- Handles that you can grip (standard version).
- Plug in signal modifiers (optional).
- High-quality, close-tolerance components throughout.

Protection Features

- Suppression of inrush current at mains turn-on.
- Input muting at turn-on.
- Input overvoltage protection.
- Radio-frequency interference suppression.
- Short-circuit protection and indication.
- Mains circuit breaker.
- Independent DC supply rail fuses.
- Layout, grounding, decoupling and componentry have been optimized to provide the user with **stability, reliability and longevity.**




Contents

	Page
1. Introduction	7
2. Controls, Connectors and Indicators	8
2.1 Front Panel	9
2.2 Rear Panel	11
3. Installation	13
4. Operation	16
5. Bridge Mode	19
6. Two Ohm or Not Two Ohm	19
7. Maintenance	20
8. Warranty	21
9. Specification	22

List of Illustrations

	Page
Figure 1. Block Diagram	5
Figure 2. Front Panel Layouts	8
Figure 3. Rear Panel Layouts	10
Figure 4. Case Dimensions	12
Figure 5. "Speakon" Connector Wiring	15
Figure 6. Bridge Mode Speaker Wiring	18



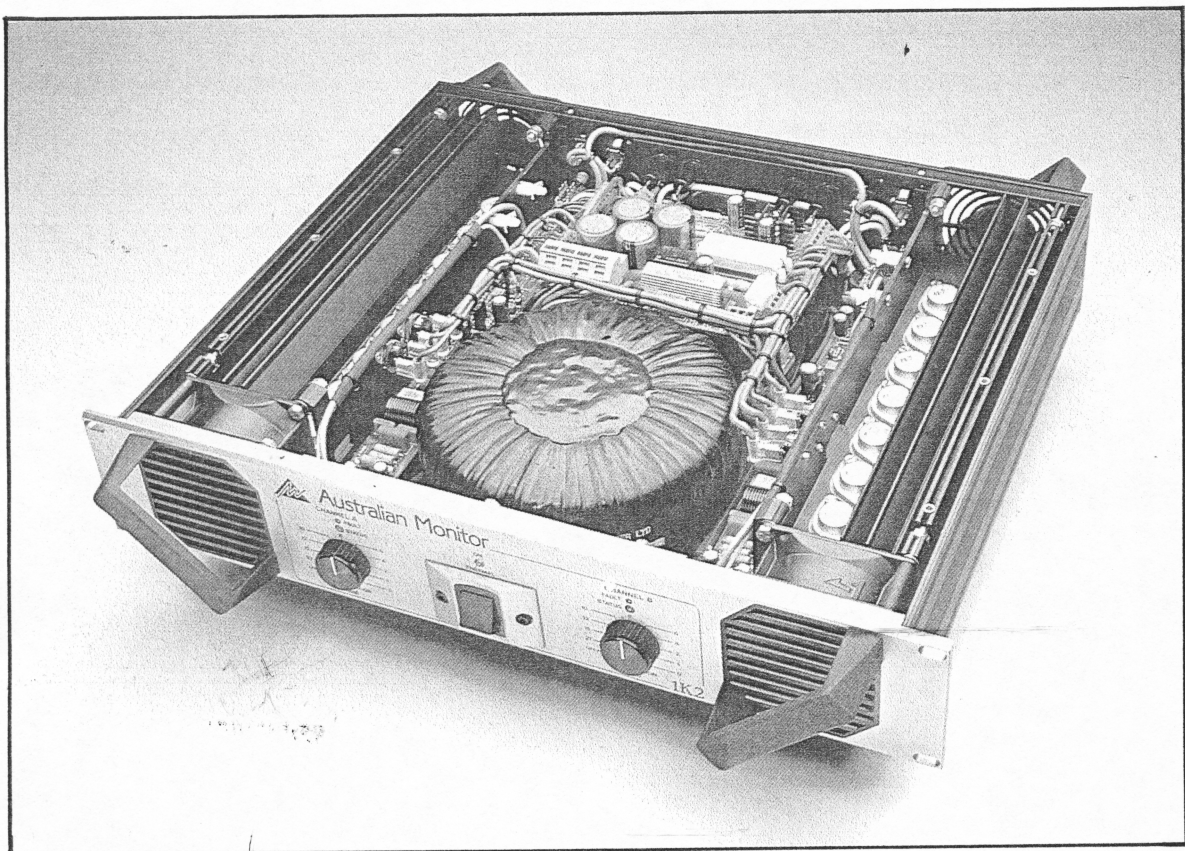

1. Introduction

Congratulations on choosing Australian Monitor for your professional amplification requirements.

The design of your K Series Audio Power Amplifiers embrace all the aspects of a well designed unit. The visual design, mechanical, electrical and sonic parameters, along with our dedicated manufacturing process, have all been optimized to provide a professional tool that exhibits quality, reliability and longevity.

The K Series amplifiers are 2 unit (3.5") tall, 19" wide rack mountable units.

Figure 1 shows a block diagram of the amplifier. Each channel of the amplifier comprises a balanced active input with a buffered attenuator driving a differential class A drive stage which in turn drives a fan-cooled, class AB, MOSFET output stage configured as a source follower. The unit operates from a high current-capable linear power supply.

These units have been specifically designed to deliver their high power output with minimal distortion, and provide the critical degree of control required by your speakers, at high duty cycles for extended periods.

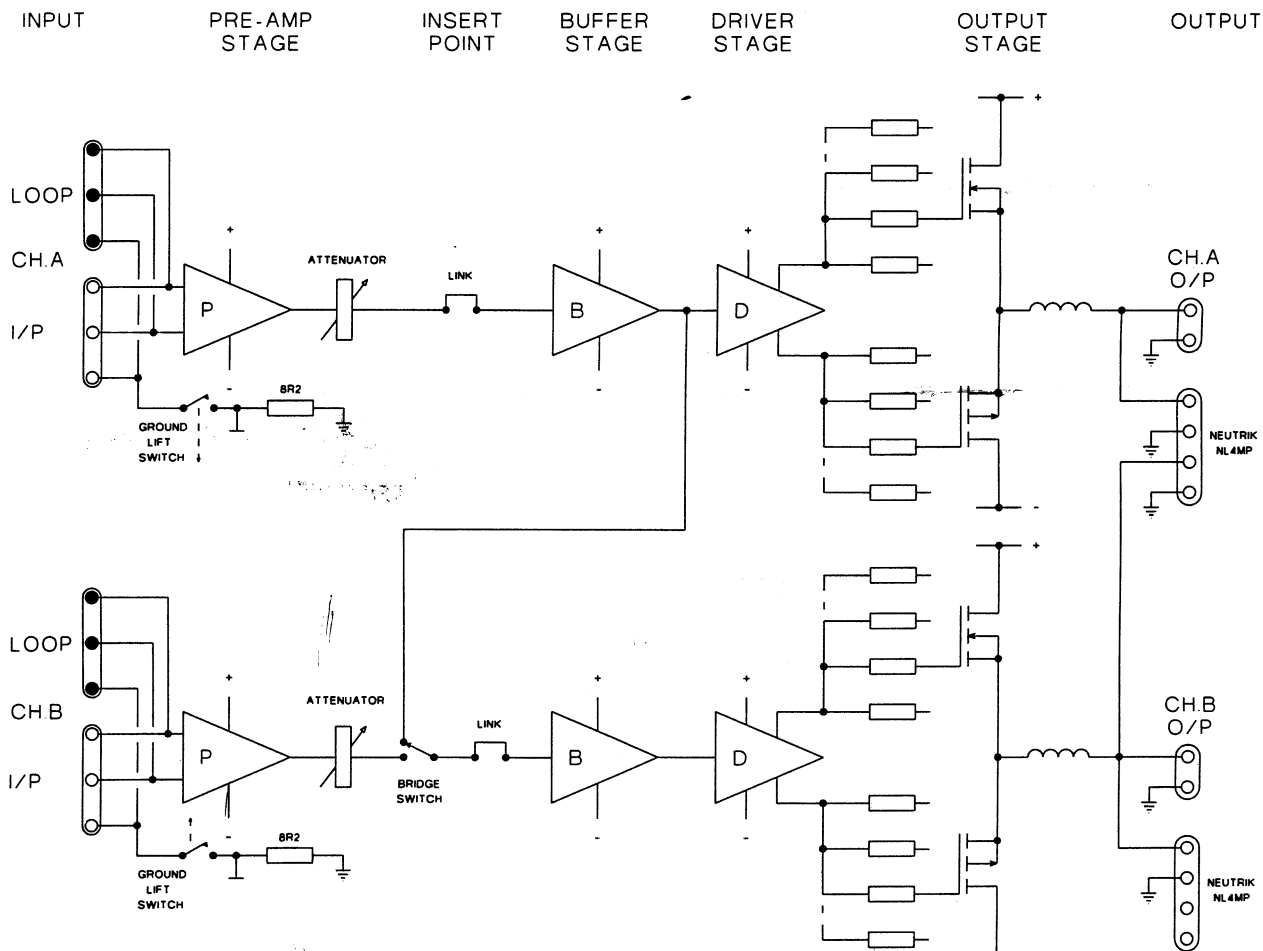


Figure 1 Amplifier Block Diagram

2. Controls, Connectors & Indicators

Models and Variants in the K-Series

The K-series amplifiers are supplied in three models (K88, K88 THX and 1K2). Each model comes in four variants to suit different applications. All variants use the same electronics but have different front and back panel and cooling arrangements. Optional: audiophile/studio version with low noise cooling fans.

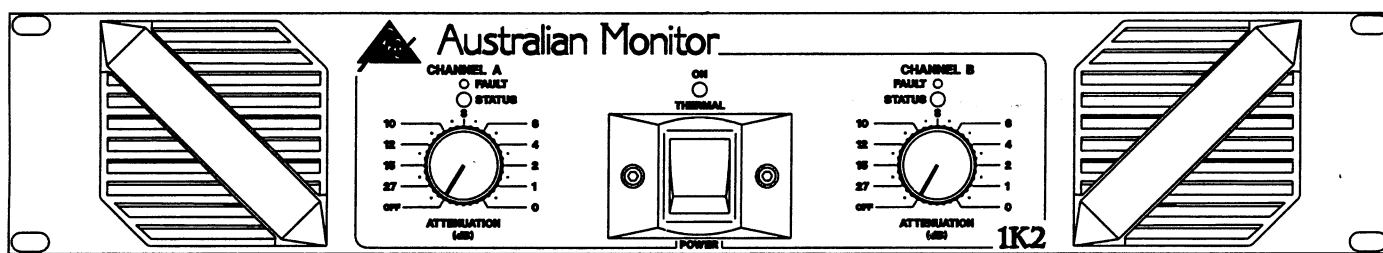


Figure 2 Front Panel Layouts



Front Panel

The K Series models have identical front panel layouts. Figure 2 shows the panel layouts of the four K variants. The functions of the controls and indicators are as follows:

1 Fault Indicator

This amber LED will flash when a fault condition exists.

The fault detection circuit monitors the difference between drive and output in your amplifier.

If you have a short on the speaker output or a blown negative rail fuse the LED will flash brightly in sync with the programme. This LED will also flash with programme peaks for gross overloads or if the load is 2 ohms or less.

The circuit has two stages of operation:

1. It will provide indication (e.g gross overload) but does not affect the input signal.
2. It will indicate and mute the input signal (e.g shorted output).

2 Attenuator

Level control for your amplifier is provided by a 21 position detented potentiometer and indicates gain reduction in decibels from the 0 dB position (maximum gain, no attenuation).

3 Power Switch

Press the switch **down** for power **on** and **up** for power **off**. At start-up (turn-on) the input to the amplifier is muted by 30dB for approximately two seconds.

4 On/Thermal Indicator

This is a dual colored LED which will normally be **green** and indicates that the amplifier is on and receiving mains power.

In the advent of a thermal overload this LED will turn **red** indicating that the internal operating temperature of the amplifier has exceeded a safe level of operation and that the amplifier has shut down. The fans will continue

to run and once the amplifier has had a cool-down period the unit will restart, automatically providing inrush current suppression and input muting.

This indicator also provides indication of correct operation of the mains inrush current suppression circuit where:

1. It will flash red at the instant of turn on then illuminate **green** or,
2. It will remain **red** turning to **orange** and flash in sync with the programme. If this happens, turn off your unit immediately as the inrush current suppression circuit needs servicing..

5 Status Indicator

This is a dual color LED which displays the status of the output stage and displays three levels of operation. These levels are:

below 1 watt	(unlit)
1 watt and above	(green)
1dB below actual clipping	(red)

The LED will turn green once the output voltage exceeds 2.828 volts (1 watt re 8 ohms or 2 watts re 4 ohms). This is equivalent to:
24dB below rated power for a K88 or
26dB below rated power for a 1K2.

The LED will change to red once the output exceeds the -1dB point before actual clipping of the amplifier's output stage. The threshold of the -1 dB point is referred to the amplifier supply rails and alters with changes in the mains supply, changes in the load and duty cycle fluctuations.

The attack and decay time (ballistics), of the status circuit are those of a Peak Programme Meter (P.P.M.)

If using this indicator to line up sensitivities, apply a steady tone (e.g slate on a mixing console). The 1 watt level is the mid-point between the indicator illuminating and extinguishing.

The amplifier is not damaged by running into clipping, but speakers may be. To maximise the life of your speakers, try to keep clipping infrequent.



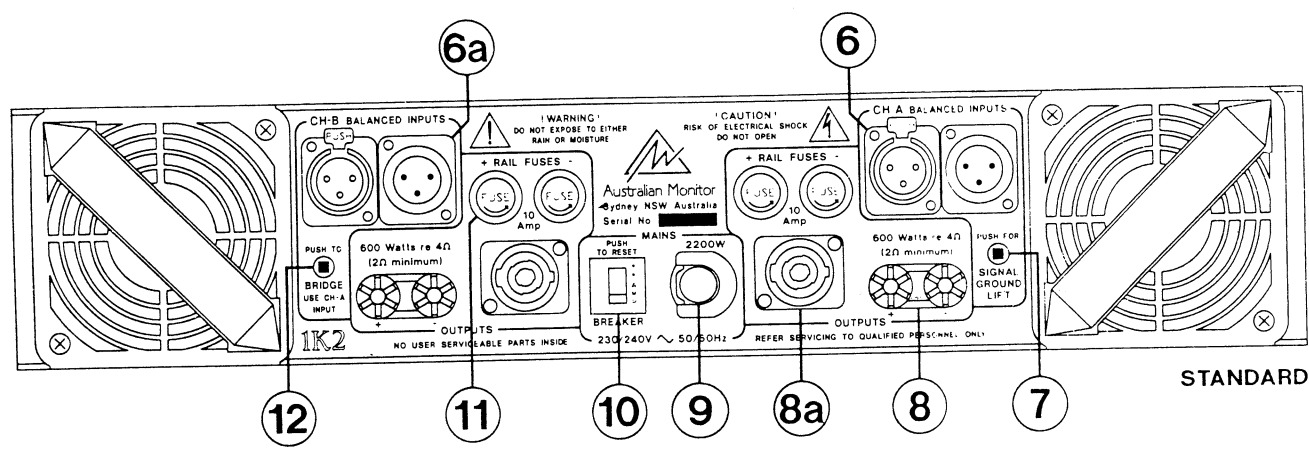


Figure 3 Rear Panel Layouts



Rear Panel

6 Balanced Input

A female 3-pin XLR connector is provided on each input:

Pin 1 = Signal Ground;

Pin 2 = Cold (inverting or reverse phase).

Pin 3 = Hot (non-inverting or in phase);

6a Signal Strapping

(Standard version only)

A male 3-pin XLR connector is provided and wired in parallel with the female input XLR for strapping/looping signal between amplifiers.

6b Level Control

(Contractor version only)

A rear panel mounted 21 position detented potentiometer is provided on contractor models for input level control on each channel.

6c Barrier Strip Input

(Contractor version only)

A three terminal barrier strip connector is provided on contractor versions for "hard wiring" signal input in permanent situations.

7 Signal Ground Lift Switch

(Standard version only)

When this switch is engaged it disconnects signal ground from the input connectors on both channels. It is intended to be used when "hum" is caused by earth loops (due to different ground potentials between source equipment and the amplifier) or stray magnetic field pick up on the input ground/shield wiring. (It does not interrupt signal ground/continuity on the strapping connector). **The amplifier should be turned off before engaging this switch!**

8 Binding Post Outputs

Binding posts (banana jacks) are provided for speaker output termination with banana plugs, spade type lugs or bare wire. The red post is used as **positive** and the black post is used as **negative**.

8a SPEAKON Output Connector

(Standard version only)

The NEUTRIK (NL4MP) 4way SPEAKON connector is

provided as an additional speaker output. This emerging standard of loudspeaker to amplifier connection allows access to both channels of the amplifier via the one connector for bi-amp applications.

9 Mains Lead

Your amplifier is supplied with a heavy duty mains lead (power cord) appropriately rated for the mains supply voltage marked on the rear panel of your amplifier. The wires in the mains lead are colored in accordance with the following code:

BROWN,	= ACTIVE;
BLUE	= NEUTRAL;
GREEN AND YELLOW	= EARTH.

Your unit must always be earthed!

10 Mains Circuit Breaker

A "push to reset" thermal circuit breaker is supplied on your amplifier providing overall protection of your amplifier's power supply. It will isolate the "active" mains conductor in the event of a high current internal fault or in continued overload conditions.

11 D.C. Rail Fuses

These 3AG "fast blow" type fuses are in series with the positive and negative supply rails for each channel of your amplifier's output stage. These fuses provide overall protection of the output stage and can also be used to isolate individual channels in case a fault condition exists.

If you need to replace the rail fuses they must be replaced with the same type and the value must be that which is marked on the rear panel:

K88=8 Amp.

1K2=10 Amp.

12 Bridge Switch

(Standard version only)

Pushing this switch in engages the BRIDGED/MONO mode of operation. In this mode your amplifier will only accept signal applied to channel A's input XLRs and the level of both channels will be controlled by channel A's attenuator. The output from channel B will automatically be of the opposite polarity (reversed phase) and speaker termination should be sourced from the red binding-post outputs.



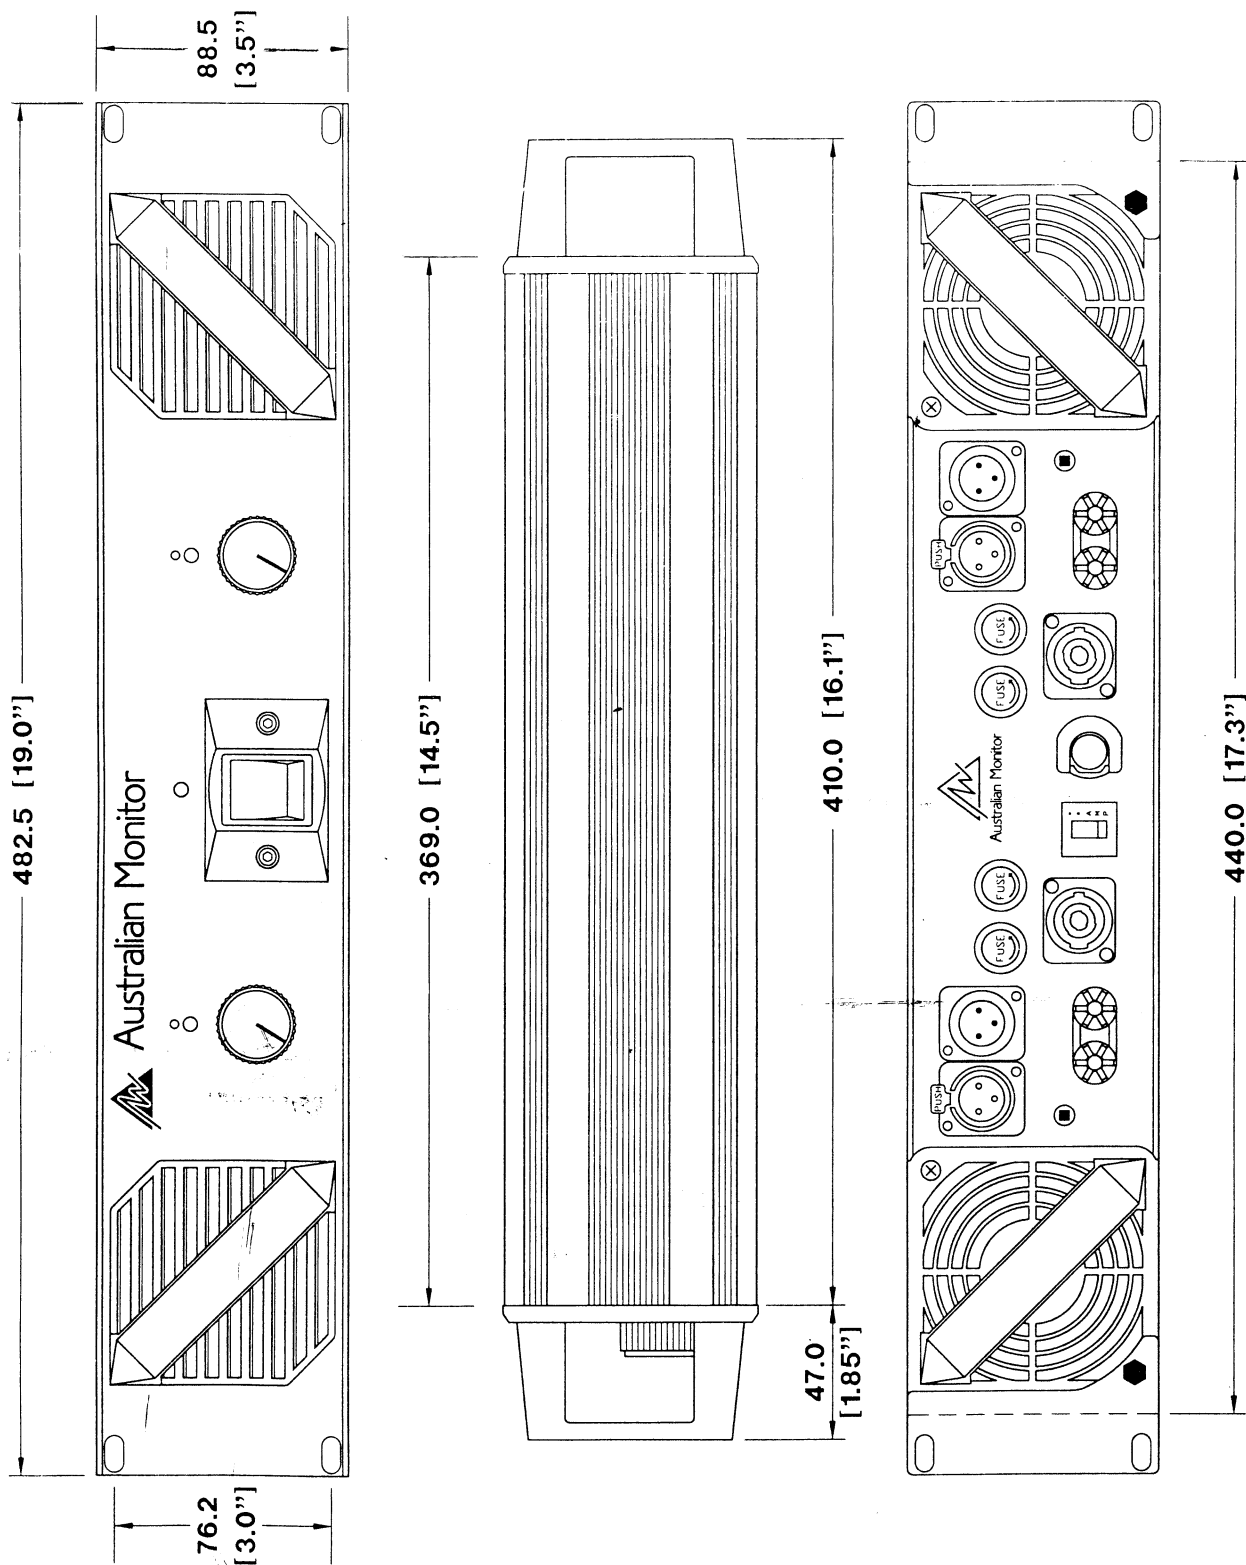


Figure 4 Dimensions



3. Installation

Mains Lead Wiring

WARNING

Your amplifier must be earthed at all times!

When you first receive your amplifier it may not have a mains plug attached. You must ensure that an appropriate plug is used and corresponds with the amplifier's current (ampere) requirements and meets the approval of your local energy authority.

The wires in the mains lead are colored in accordance with the following code:

GREEN AND YELLOW = EARTH

Connect to the terminal marked with the letter E, with the EARTH SYMBOL or colored GREEN.

BLUE = NEUTRAL

Connect to the terminal marked with the letter N (or colored WHITE in USA and Canada, or colored BLACK in the United Kingdom).

BROWN = ACTIVE (LIVE)

Connect to the terminal marked with the letter A or L (or colored BLACK in USA and Canada or colored RED in the United Kingdom).

Power Requirements

Model: K88

Mains Voltage	Circuit Breaker Rating
100, 110-120	15Amps
240, 220-230	7Amps

power consumption at idle = 120 Watts
 power consumption
 at 440 + 440 Watts output re 4 ohms = 1400 watts.

Model: 1K2

Mains Voltage	Circuit Breaker Rating
100, 110-120	20Amps
240, 220-230	10Amps

power consumption at idle = 160 Watts
 power consumption
 at 600+600 Watts output re 4 ohms = 2200 watts.

Ensure that **your** mains voltage is the same as the rear panel mains voltage marker.

Mounting

Your amplifier is designed for standard 19" rack mounting and occupies 2 EIA rack units (3.5"). The mounting centers are:

vertical: 3.0" (76.2mm)
 horizontal: 18.2" (461.2mm) to 18.6" (473.8mm).

The slots in the mounting flange will accept bolt diameters up to 1/4" (6.35mm).

We recommend that you provide additional support for the amplifier, especially if road use is planned, as the weight can bend some racks otherwise. This support can be provided by secure shelving, support rails or rear panel support brackets. Suitable brackets for K-series amplifiers are available from your Australian Monitor dealer.

Cooling

Each channel of your 1K2/K88 amplifier is cooled by an axial fan which draws cool air from the front of the unit and expels the heated air from the rear of the unit. Standard units offer two speed fans which run at half speed, switching to full speed when the internal heatsink temperature exceeds 60° C (128° F). Contractor and Utility units operate with single speed fans (high speed only), while the Profile is supplied with low-noise, low-speed fans.

An unrestricted airflow into and out from the unit must be provided. Any restriction of the air flow will cause heat to build up within the unit and possibly force the unit into its thermal shutdown mode.

If the units are to be operated in an environment where the airflow is restricted such as sealed racks or even when running 2 ohm loads, the cooling should be supplemented



by extra cooling fans to evacuate the heated air and aid the flow of cool air through the unit.

Input Wiring

IMPORTANT

Do not directly connect pin 1 on the amplifier's input or strapping XLR, to the amplifier's chassis, speaker ground or power ground!

NOTE

Input signal ground is not to be used as a safety ground (earth).

The input to your amplifier is a balanced 3-pin system and requires all three pins to be connected. Only high quality twin-core shielded cable should be used.

When wiring for a balanced source the connector going to the input of your amplifier should be wired as follows:

Pin 3 = HOT (non inverting).

Pin 2 = COLD (inverting).

Pin 1 = GROUND/ SHIELD.

When wiring from an unbalanced source you must ensure that pin 2 is connected to pin 1 (input ground), either by linking the pins in the input connector or by the source equipment output wiring.

When wiring for an unbalanced source:

Pin 3 = Hot (in phase with the amplifier's output),

Pin 2 = Ground/Shield (joins to pin 1).

Pin 1 = Ground/Shield

The barrier strip connector on the CONTRACTOR models is wired in parallel with the female XLR input connector as follows:

Pin 3 = +ve,

Pin 2 = -ve,

Pin 1 = GND (input signal ground).

NOTE

In-line XLR connectors often have a termination lug that connects directly to the chassis of the connector.

Do **not** link this lug to pin 1 at the amplifier's input as it will defeat the amplifier's input grounding scheme. This lug is often referred to as a "drain" and is used to provide a

termination to the chassis for shielding purposes when a floating signal ground is required between the source and destination, or when disconnecting the signal ground is required to reduce earth loop noise, or noise induced into signal grounds from stray magnetic fields.

Output Wiring

When wiring to your speakers always use the largest gauge wire your connector will accept. The longer the speaker lead the greater the losses will be, resulting in reduced power and less damping at the load. We recommend using a heavy duty two core flex (four core flex if bi-amping) 10 to 12 gauge (2mm² to 2.5mm² or 50/0.25 or equivalent) as a minimum.

Binding Post Outputs

When terminating to the 4 mm binding post (banana jack) output connectors, banana plugs or spade type lugs can be used. The red terminal is **positive** and the black terminal is **negative**.

If running in BRIDGE mode, only the **red** binding posts are used. Channel A provides the positive output to the load and channel B provides the negative output to the load.

SPEAKON Outputs

(Standard version only)

When using the NEUTRIK SPEAKON (NL4MP) connector for speaker output, use only the mating NEUTRIK NL4FC in-line connector. This connector is designed so that both channels can be fed from a single connector.

Two SPEAKON connectors are provided on the amplifier.

The "channel A" SPEAKON actually carries both channel A & channel B outputs (see figure 4: Speaker Wiring Diagrams).

The "channel B" SPEAKON carries the channel B output only.

This arrangement allows you the option of connecting outputs separately or together.



Connecting through a single connector has the advantage of preserving phasing and channel allocation, which is particularly important when **bi-amping** or in **bridge** mode.

IMPORTANT

Do not overload your amplifier by connecting the channel B output twice!

Channel A is used as the "dominant" channel and when sourcing a dual output from channel A the following standard should be used:


Channel A = Left or Low Frequencies.
Channel B = Right or High Frequencies.

When in **bridge** mode:


Pin 1+ = Bridge Output Positive

Pin 2+ = Bridge Output Negative.


SINGLE CONNECTION

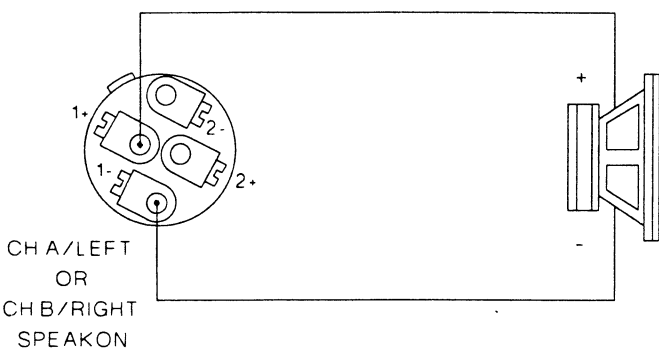

BRIDGED CONNECTION

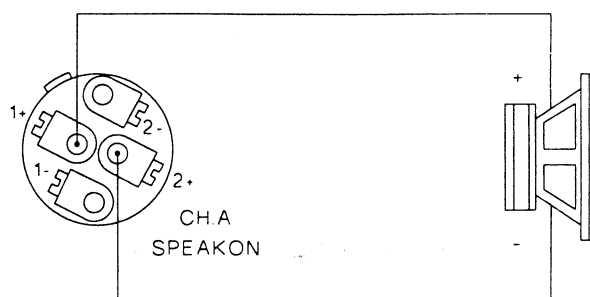

DUAL CONNECTION

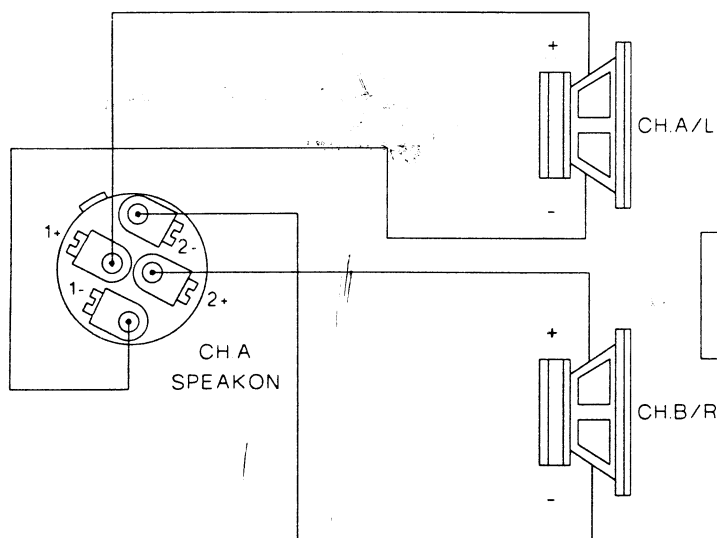

BI-AMP CONNECTION +

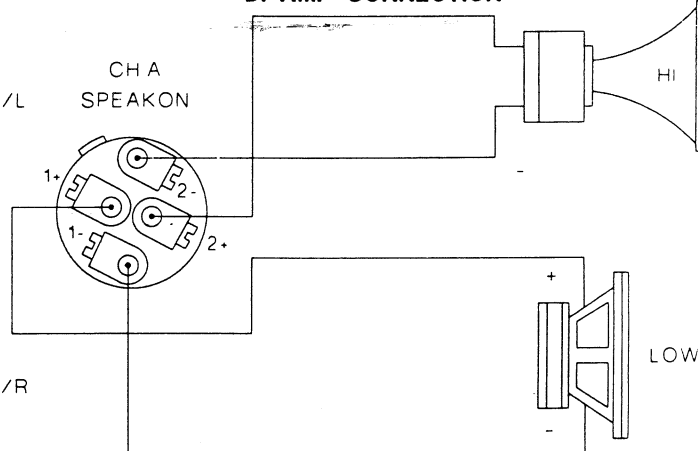


Figure 5. "Speakon" Connector Wiring Diagram



4. Operation

IMPORTANT

All signal source equipment should be adequately earthed. This not only ensures **your** safety but everybody else's as well. Faults can and do occur in mains connected equipment where the chassis can become "live" if it is not properly earthed. In these instances the fault in a "floating" (ungrounded) piece of equipment will look for the shortest path to ground which could possibly be your amplifier's input. If the fault current is large enough it will destroy the input to your amplifier and look for the next available path, which **may be you!**

Before making any connections to your 1K2/K88 amplifier observe the following:

- 1 Ensure the mains voltage supply matches the label on the rear panel of your amplifier.
- 2 Ensure that all system grounds (earth) are connected from a common point. Avoid powering equipment within a system from multiple power sources that may be separated by large distances.
- 3 Check the continuity of all interconnecting leads to your amplifier, ensure that there are no open or short circuited conductors.
- 4 Ensure that the power handling of your load (speakers) can adequately cope with the power output of the amplifier.

Before operating your 1K2/K88 amplifier, ensure that:

- The attenuators are at the "OFF" position (fully anticlockwise).
- The power switch is OFF (up).
- The GROUND LIFT Switch is not engaged (should be in the "out" position).
- The BRIDGE Switch is not engaged if you are not running the amp in bridged mode.

Powering Up

REMEMBER

The amplifier should be the **last** piece of equipment that you turn **on** and the **first** piece of equipment that you turn **off**.

We recommend turning the attenuators on your amplifier **down** when turning the unit on.

When you power up your 1K2/K88, your amplifier goes through an establishment period before it will accept signal. The Inrush Current Supression (ICS) circuit is in operation for the first 0.5 seconds. This limits the mains current to prevent "nuisance-tripping" of circuit breakers.

During this period the THERMAL/ON LED will flash **red** then turn **yellow** as the mains voltage gradually charges up the power supply. You will then hear a relay "click", indicating mains is now directly applied to the amplifier and the THERMAL/ON LED will be **green**.

While the ICS circuit operates there is also a 30dB mute. After two seconds this mute will release, allowing any applied signal to pass unattenuated.

When switching the amplifier off, **wait** a couple of seconds before switching the unit on again. This allows the ICS circuit to reset.

Level Matching

The normal position for the attenuator is the "0 dB" position (fully clockwise, no attenuation). In this position the amplifier operates at full gain. Turning the attenuator back (anticlockwise) reduces the input sensitivity by the amount marked on the attenuator scale (dial).

NOTE

If full power output is required you should operate your amplifier with the front panel attenuator above the -15dB position, otherwise clipping of the input circuitry and its resultant distortion will occur before full output power is achieved.

Sensitivity

Your amplifier is a linear device operating with a fixed input to output voltage gain. The maximum output voltage swing is determined by the applied mains voltage, load, load type and the duty cycle of the applied signal.

The voltage gain factor of your amplifier is:

37 (31.36 dB) for a K88 and
45.25 (33.11 dB) for a 1K2.

The **input sensitivity** for your 1K2/K88 amplifier when the attenuator is at the "0" dB attenuation position (fully clockwise) is nominally:



+4.0dB (1.23 volts in) for rated power into a 8 ohm load.
+2.6dB (1.04 volts in) for rated power into a 4 ohm load.

Each channel of your 1K2/K88 amplifier has a balanced **input impedance** of 25 kOhms (25,000 Ohms) and should not present a difficult load for any signal source.

Your signal source (i.e. the equipment feeding the amplifier) should have an **output impedance** of 2 kOhms or lower to avoid unwanted high frequency loss in the cabling.

Input overload occurs at +20.5dBu (8.25 volts).
See the specification section for more detailed information.

Hum Problems

Most equipment is designed for minimum hum when used under ideal conditions. When connected to other equipment and to safety earth in an electrically noisy environment, however, problems will often occur.

The three "E"s of hum and hum related noise which can plague your audio system are:

- a) Electrostatic radiation,
- b) Electromagnetic radiation, and
- c) Earth loops

Electrostatic radiation capacitively couples to system elements causing an interference voltage that mainly affects higher impedance paths, such as amplifier inputs. The source is generally a nearby high voltage such as a mains lead or a speaker lead. The problem can usually be reduced by moving the offending lead away, or by providing additional electrostatic shielding (i.e. an earthed conductor which forms a barrier to the field).

Electromagnetic radiation induces interference currents into system elements that mainly effect lower impedance paths. Radio transmitters or stray magnetic fields from mains transformers are often the cause of this problem. It is generally more difficult to eliminate this kind of interference, but again, moving the source away or providing a magnetic shield (i.e. a steel shield) should help.

Earth loops can arise from the interfacing of the various pieces of equipment and their connections to safety earth.

This is by far the most common cause of hum, and it occurs when source equipment and the amplifier are plugged into different points along the safety earth where

the safety earth wiring has a current in it. The current flowing through the wire produces a voltage drop due to the wire's resistance. This voltage difference between the amp earth and source equipment earth appears to the amplifiers input as a signal and is amplified as hum.

There are three things you can do to avoid earth loop problems:

1. Ensure your mains power for the audio system is "quiet" i.e. without equipment on it such as air-conditioning, refrigeration or lighting which will generate noise in the earth circuit.
2. Ensure all equipment within the system shares a common ground/ safety earth point. This will reduce the possibility of circulating earth currents as the equipment will be referenced to the same ground potential.
3. Ensure that balanced signal leads going to the amplifier are connected to earth at one end only.

Signal Ground-Lift Switch

When proper system hook-up has been carried out, you may still have some hum or hum related noise. This may be due to any of the previously mentioned gremlins.


Your 1K2/K88 amplifier has a "Signal Ground Lift" switch which disconnects the input ground wiring from the amplifier. A substantial drop in hum and or hum related noise can result from judicious use of this switch.

NOTE

If the input ground lift switch is used you must ensure adequate shielding of the input wiring. If the signal source equipment does not provide adequate shielding you must disconnect your shield from input connector pin 1 and reconnect it to the "drain" contact going to the amplifier's input. This will ensure the shield on your input wiring actually goes to the amplifier chassis and subsequently to earth.

Always ensure that your amplifier is **off** and the attenuators are **down** when you engage this switch. This switch should only be used when the amplifier is operated from a **balanced** signal source. Be wary of **quasi-balanced** outputs, these are often no more than floating **unbalanced** outputs.

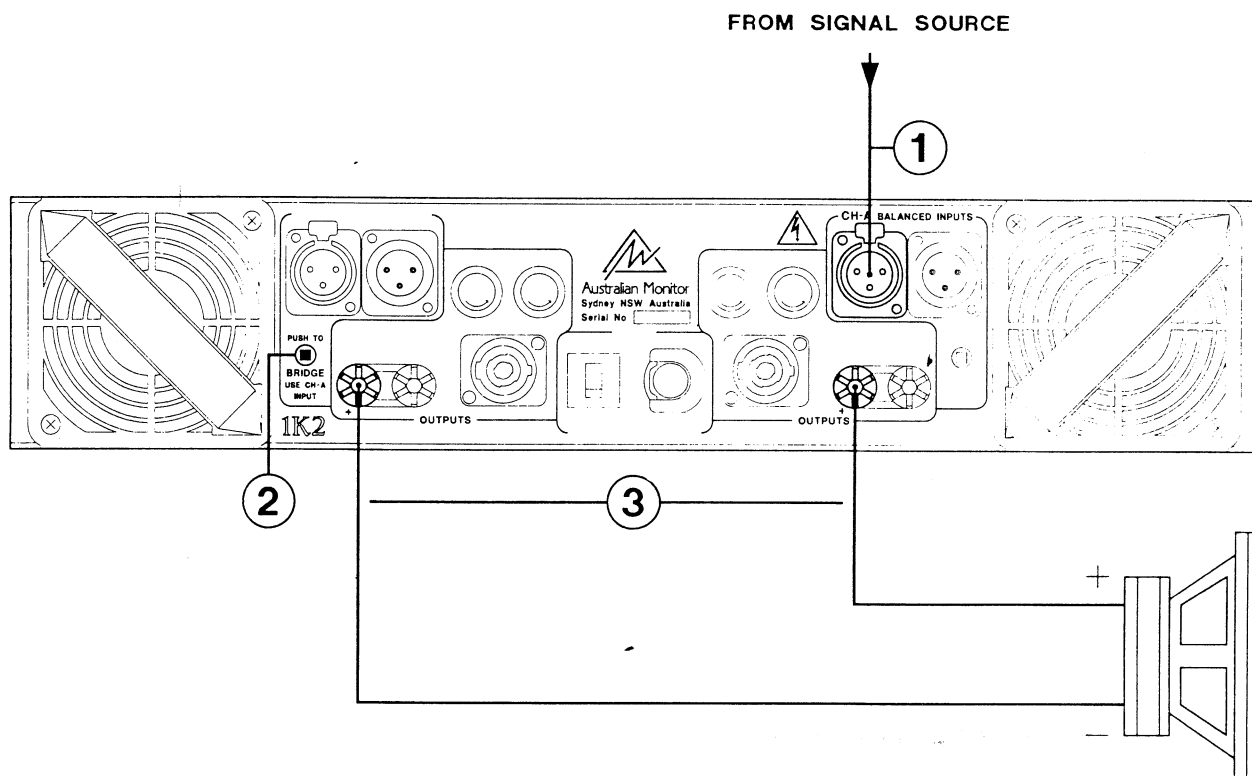

Figure 6 *Bridge Mode Speaker Connection*

5. Bridge Mode

The term BRIDGE is used when two independent amplifier channels are used to drive the same load. The load is in series (a bridge) between the two amplifier channels.

Channel A is used as the “dominant” channel and its output is **in phase** with the input signal, and channel B has its phase reversed so it is exactly 180° **out of phase** with the input signal.

As two amplifiers with a phase difference of 180° are now driving the load you will now have double the voltage into the load. This means you will now have four times the power into the load. The output can is now an **active balanced output**.

A common use of an amplifier in BRIDGE mode is for driving 70 Volt & 100 volt distribution lines. The 1K2 can produce over 100 volts with line impedances over 8 ohms and the K88 can produce over 84 volts with line impedances over 8 ohms.

Equally the units can be used in bridge mode to provide the correct voltage/power requirements for an applicable load.

As shown in the diagram there are three steps in setting up your 1K2/K88 amplifier for running in BRIDGE mode. Whilst the amplifier is **off**,

1. Connect the signal source to the channel A female input XLR. The channel A attenuator becomes the level control for both channels.
2. Engage the “push to bridge” switch.
3. Connect your load between the **red** binding post output terminals, where the **positive** side of the load is connected to the channel A output and the **negative** side of the load goes to the channel B output. There are no further connections required. You can also source the output from the channel A SPEAKON output connector where channel A will be on the pin marked 1+ and channel B will be on the pin marked 2+.



6. Two Ohm or Not Two Ohm

NOTE

Ensure adequate ventilation and monitor the FAULT indicators to guard against thermal shutdown when driving two ohm loads.

The load that a loudspeaker presents to an amplifier is very complex and at different frequencies can be inductive, capacitive, resistive or a combination of these. With the complex interaction of these attributes, which alter from loudspeaker to loudspeaker, a definitive load for an amplifier does not really exist.

Loudspeakers operating within an enclosure carry **anominal** impedance. This nominal impedance is a rough guide only to the actual characteristics of the speaker.

As an example, a loudspeaker with a nominal impedance of say 8 ohms, may have an impedance of over 50 ohms at resonance, drop to less than 6 ohms after the resonance peak and then increase to over 16 ohms for higher frequencies.

A 6 ohm load makes an amplifier work "harder" than an 8 ohm load at the same voltage, as it requires more current.

Though various loudspeakers may have an equal nominal impedance, some loads are more "equal" than others (with apologies to G.B. Shaw).

As well as this burden on the amplifier, the transient waveforms found in actual use can demand more current than the "steady-state" sinewaves used in most amplifier bench tests.

The power output of your 1K2/K88 quoted on the specification sheet is derived from voltage excursion into a resistive load for a sine wave at a given frequency. Though this method is in line with the various standards that exist, it only gives an indication of maximum voltage swing (before clipping) for a given load. This method of rating power does not give an indication of the current (Ampere) capability of the amplifier, nor does it show the amplifier's ability to sustain high energy waveforms.

Your 1K2/K88 amplifier is designed to be able to deliver more than twice the current than that shown on the specification sheet to cope with difficult loads and/or high energy waveforms.

This extra current reserve is the result of over engineering and is the headroom the amplifier utilizes to control the loudspeaker and deal with the "reactive energy" from the loudspeaker load that is dissipated within the amplifier.

Your 1K2/K88 amplifier is able to drive 2 ohm loads or operate in BRIDGE mode into 4 ohms. The operator must be aware that when driving 2 ohm loads or bridged 4 ohm loads that the currents running in the output stage are very large and will cause greater heat build up within the amplifier than higher impedance loads will.

The **front panel fault indicators** can be used to provide an indication of the "difficulty" of the load and will give the operator an indication of the heat build up in the output stage.

If the fault indicators flash with the "clip" LED or do not illuminate until well into clipping then the load can be considered as normal or easy.

If the fault indicator starts to flash before the "clip" LED then the load should be considered complex and/or difficult.

For the more complex and/or difficult loads, the illumination of the "fault" LED on programme peaks should be interpreted as the **output level limit**. Driving the output continuously past this point could result in muting of the output stage, fuse blowing or premature thermal shutdown.

The fault detection circuit is also thermally compensated, and fault indication will occur earlier when the unit is hot. If the "fault" LED continually lights earlier than normal, then the unit is heating up. If the signal level is not reduced to compensate for the heating of the unit then thermal shutdown may occur.

7. Maintenance

Your 1K2/K88 amplifier will need minimal maintenance. No internal adjustments need to be made to the unit to maintain optimum performance.

To provide years of unhindered operation we suggest a maintenance inspection be carried out every 12 months or so.

Fuses

NOTE

Make sure the unit is **off** and give the main filter capacitors time to discharge before removing fuses.

The positive and negative rail fuse holders use spring loading to apply force to the contact faces of the 3AG fuse cartridge. The surface around the mechanical contact area of the fuse can be subject to oxidization in some environments. Removing and re-installing the fuse will help renew the contact surface.

You should replace the fuse if the element is **sagging or discoloured**.

When checking for a failed fuse, do not rely on visual inspection alone. You should use an ohmmeter to check continuity.

Fans

Due to the openness of the air path through your 1K2/K88 amplifier, very little dust should settle within the amplifier. The unit has been designed so that any dust and/or foreign particles that do settle within the amplifier will not unduly hinder the cooling of the unit.

Over time, dust may build up on the leading edge of the fan blades and reduce their cooling efficiency. The time taken for this to happen will depend on the environment and the amount of use.

The fan blades are accessible through the louvres in the fan grille and can be easily cleaned. You need only hold the fan rotor still and wipe the dust off the blades.

Dust build up on the front and rear grilles should also be periodically removed.



8. Warranty

Australian Monitor Pty Ltd of 53 College St, Gladesville, New South Wales, Australia, warrants the original purchaser of each K-Series amplifier (purchased at an authorised Australian Monitor dealer) that it will be free from defects in material and workmanship for a period of five years from the original date of purchase.

Australian Monitor will, at its option, repair or replace any unit or component covered by this warranty which becomes defective or malfunctions under normal use and service during the period of this warranty, at no charge for parts or labour to the original owner.

This warranty does not cover blown fuses, faulty fuse contacts, thermal problems due to obstructed airflow, or defects or malfunctions resulting from accidents, misuse, abuse, operation with the incorrect AC voltage, connection to faulty equipment, modification or alteration without prior factory approval or service by unauthorised personnel.

It is the owner's responsibility to ensure that normal maintenance inspections are carried out at regular intervals as recommended in the maintenance section of this manual. Australian Monitor reserves the right to refuse warranty service where the owner fails to take reasonable

care in use and maintenance of the amplifier.


To validate this warranty, the original purchaser must complete and mail the warranty registration card to Australian Monitor at the above address within fourteen days of purchase.

To obtain warranty service, the equipment should be shipped to an authorised Australian Monitor dealer or to Australian Monitor at the above address, at the owner's expense.

Units with a defaced serial number will not be accepted for warranty service. Any evidence of alteration, erasure or forgery of purchase receipt will also void this warranty.

Australian Monitor accepts no liability for any consequential damages, whether direct or indirect, arising from the use or misuse of its products.

Australian Monitor reserves the right to alter its designs and specifications at any time without notice or obligation to previous purchasers.

 Australian Monitor	
5 YEAR WARRANTY REGISTRATION IMPORTANT	
Please complete this card and return it immediately after unpacking the product. This card is to be sent DIRECTLY to Australian Monitor. NOTE! Warranty is effective ONLY upon receipt of this card.	
COMPANY _____	
NAME _____	MODEL _____
ADDRESS _____	SERIAL NO _____
CITY _____	DATE PURCHASED _____
STATE _____	CODE _____
COUNTRY _____	
DEALER _____	

Ensure that you fill out and send your warranty registration card. Use this copy to record a duplicate of the details.



10. Specification

Model: 1K2				
Output Power			Input Impedance	
Test	Power 8 ohm	Power 4 ohm	Line to Line, Balanced	25 kohm
F.T.C. 20 Hz - 20 kHz @ 0.1% THD (pre-stress 4dB below rated power for 1 hr & rated power for 5 min) both channels driven			Input Sensitivity For 400W output / 8 ohm For 600W output / 4 ohm	1.2 Vrms (+4 dBu) 1.4 Vrms (+2.6dBu)
	360W	550W		
E.I.A. 1 kHz, <0.05% THD (pre-stress at rated power for 5 min) single channel driven both channels driven			Input CMRR @ 1 kHz	>80 dB
	420W 390W	680W 600W		
Pulsed @ 1 kHz, at onset of clipping 10% duty cycle, single channel driven 10% duty cycle, both channels driven			Voltage Gain @ 1 kHz	33 dB (= 45 x)
		800W 750W		
Bridge mode	1200W	1350W	Output Rise Time 20 kHz square wave 145Vpp (leading edge)	80% = 2.4 μS
2 Ohm capability single channel driven both channels driven			Slew Rate 20 kHz square wave 145Vpp (leading edge)	50V/μS
	800W 680W			
Distortion @ 0.5 dB below clipping re 4 ohms			Signal / Noise ratio linear (30 kHz) A weighted	100 dB 105 dB
THD @ 1 kHz	<0.005%			
IMD SMPTE (60 Hz / 7 kHz 4:1)	<0.015%			
IMD CCIF (14 kHz / 15 kHz 1:1)	<0.008%			
Frequency Response ± 0.15 dB: +0/-3dB:			Crosstalk @ 1 kHz	< -90 dB
	20 Hz - 20 kHz 5 Hz - 95 kHz		Weight net packed	42 lb / 19 kg 48 lb / 22 kg
Output Impedance @ 1 kHz			Dimensions excluding handles including handles (19 inch EIA rack mounting, 2 units high)	H x W x D 3.5 x 19 x 14.8 inch 88 x 482 x 375 mm 3.5 x 19 x 17.9 inch 88 x 482 x 455 mm
	15 milliohm (typical)			
Damping Factor @ 1 kHz, 8 ohm load				
	500 (typical)			



Model: K88**Output Power**

Test	Power 8 ohm	Power 4 ohm
------	----------------	----------------

F.T.C. 20 Hz - 20 kHz @ 0.1% THD (pre-stress 4dB below rated power for 1 hr & rated power for 5 min) both channels driven	280W	405W
---	------	------

E.I.A. 1 kHz, <0.05% THD (pre-stress at rated power for 5 min) single channel driven	300W	490W
both channels driven	280W	440W

Pulsed @ 1 kHz, at onset of clipping 10% duty cycle, single channel driven		660W
10% duty cycle, both channels driven		630W

Bridge mode	900W	1200W
--------------------	------	-------

2 Ohm Capability

single channel driven	760W
both channels driven	620W

Distortion

@ 0.5 dB below clipping re 4 ohms

THD @ 1 kHz	<0.005%
IMD SMPTE (60 Hz / 7 kHz 4:1)	<0.015%
IMD CCIF (14 kHz / 15 kHz 1:1)	<0.008%

Frequency Response

± 0.15 dB:	20 Hz - 20 kHz
+0/-3dB:	5 Hz - 95 kHz

Output Impedance

@ 1 kHz	15 milliohm (typical)
---------	--------------------------

Damping Factor

@ 1 kHz, 8 ohm load	500
---------------------	-----

Input Impedance

Line to Line, Balanced	25 kohm
------------------------	---------

Input Sensitivity

For 250W output / 8 ohm	1.2 Vrms (+4 dBu)
For 350W output / 4 ohm	1.04Vrms (+2.6dBu)

Input CMRR

@ 1 kHz	>80 dB
---------	--------

Voltage Gain

@ 1 kHz	31 dB (= 37 x)
---------	-------------------

Output Rise Time

20 kHz square wave 127Vpp (leading edge)	80% = 2.4 μS
---	--------------

Slew Rate

20 kHz square wave 127Vpp (leading edge)	42V/μS
---	--------

Signal / Noise ratio

linear (30 kHz)	100 dB
A weighted	104 dB

Crosstalk

@ 1 kHz	< -90 dB
---------	----------

Weight

net	37.5 lb / 17 kg
packed	43 lb / 19.5 kg

Dimensions

	H x W x D
excluding handles	3.5 x 19 x 14.8 inch 88 x 482 x 375 mm
including handles	3.5 x 19 x 17.9 inch 88 x 482 x 455 mm
(19 inch EIA rack mounting, 2 units high)	

